

Measures common track gauge and superelevation

THE ADVANTAGES

- Available for different track gauges
- Insulated from rail to rail
- Modular design and low weight
- Remote connection support
- Ergonomic design, lightweight and robust structure



SPECIFICATIONS

Track Gauge	1400-1500 mm
Cross Level	±300 mm
Accuracy	0.25-0.5 mm
Rail Contact Point	14 mm
Power	4xAA Alkaline Battery
Weight	2500 g

- At the same time, track gauge, superelevation and angle measurements can be made.
- When the voltage is below 4.6 volts, the device automatically switches itself off. In this case, replace the batteries.

How to use?

- Switch on/off with the button under the device body.
- Place the fixed rail holder on the rail.
- Make sure that there is full contact with the rail.
- Pull the mobile holder inwards and place it against the opposite rail.
- Make sure that contact is ensured.
- Follow the track gauge, superelevation and angle measurement values on the display.
- Do not forget to switch off the device after the measurement is finished.



For remote connection

- Activate the wife module of your mobile device.
- Select Voonke from the available networks and enter the device password.
- Type 192.168.1.1 in the search tab of your browser and connect to the device.